


SMART LOCK™ BORE GUIDE

BORE CLEANING MADE EASIER, NEATER, SMARTER.

This clever design combines the ability to lock the AR15 upper open while perfectly aligning cleaning rods inside the barrel. The industry-first pivot-locking arm securely holds the upper open at an optimum angle for cleaning the bore. The Smart Lock Bore Guide protects the chamber and bore from accuracy-robbing damage by preventing the cleaning rod from bowing and rubbing the bore throat. By properly aligning the rod, it is easier to push tight patches through the bore. It reduces solvent and gunk from entering the action while scrubbing a dirty bore. The included Pivot Lock holds the gun open while cleaning the star chamber.

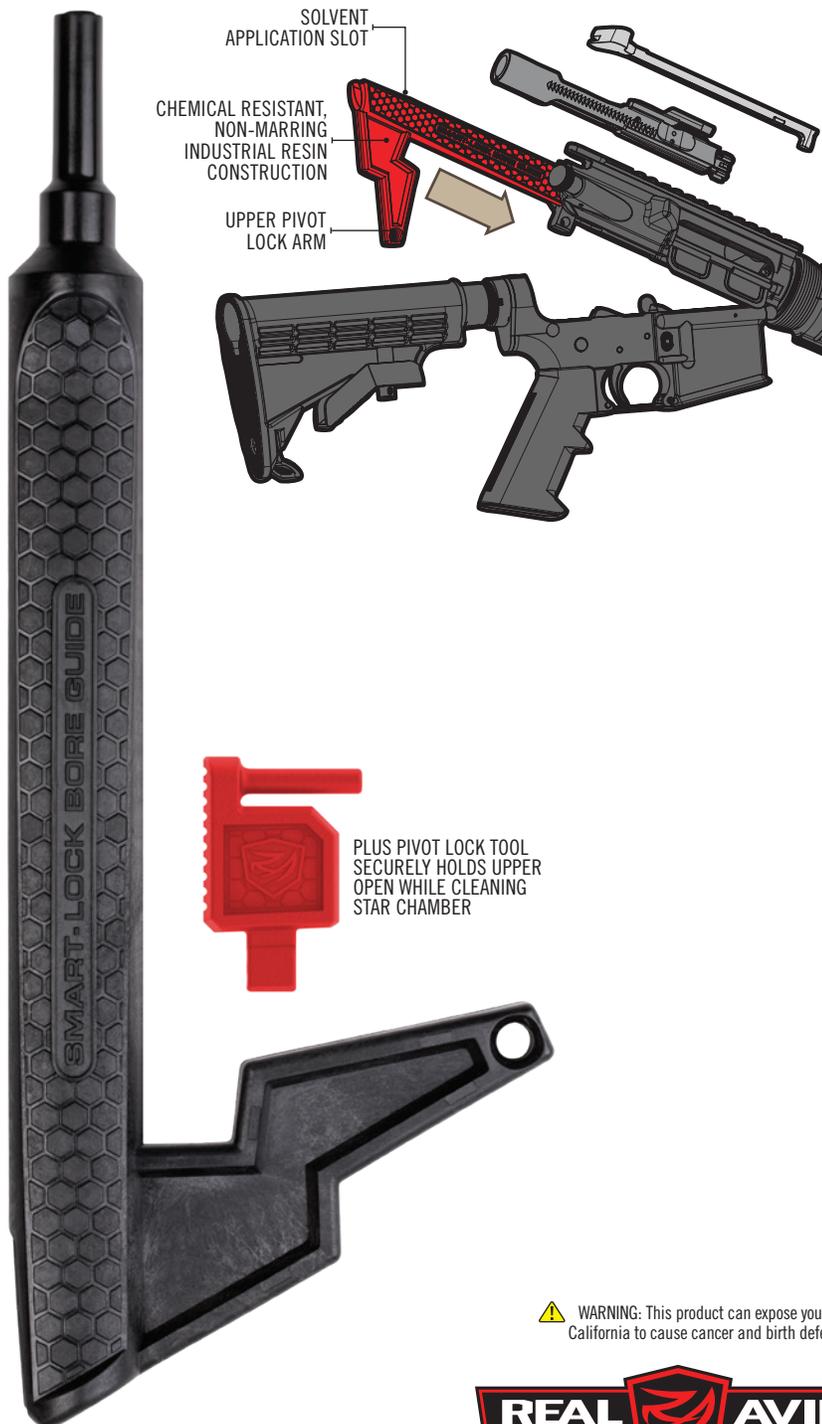

PLUS PIVOT LOCK TOOL
SECURELY HOLDS UPPER
OPEN WHILE CLEANING
STAR CHAMBER


“EXTRA HAND” CAPABILITY PLUS OPTIMUM PROTECTION OF BORE AND BORE THROAT

- Protects chamber and bore throat from damage while cleaning
- Keeps AR15 upper locked open at optimum angle for bore cleaning
- Restricts solvent leakage and keeps gunk out of the action
- Feeds cleaning rod into action
- Perfectly aligns cleaning rod and cleaning tips with barrel

AR15 PIVOT LOCKING BORE CLEANING GUIDE




Remove bolt and insert the Smart Lock Bore Guide into the chamber

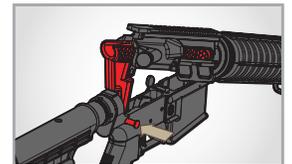

Snap pivot pin into place to hold the barrel in open position



We recommend mounting the gun on a bench vise

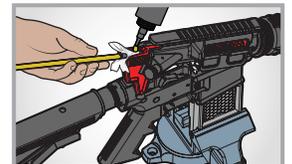

Solvent application slot restricts solvent dripping into the action



Quickly and perfectly aligns the cleaning rod with the bore without rubbing on the bore throat



Pivot Lock provides third-hand capability to hold action of gun open while cleaning star chamber

WARNING: This product can expose you to chemicals including 4,4'-Methylenedianiline, which is known to the state of California to cause cancer and birth defects or reproductive harm. For more information, go to www.P65Warnings.ca.gov.



5480 NATHAN LANE NORTH, SUITE 120
MINNEAPOLIS, MN 55442 800.286.0567
info@realavid.com | RealAvid.com
© 2020 REVO BRAND GROUP, LLC.

